


NOTES

1. All dimensions are in millimetres unless otherwise stated.
2. Alternative foundation. The contractor may use a polypropylene duct to form a socket type root.
3. Duct to be high impact polypropylene a minimum of 30mm larger in diameter than column tube.
4. Fast set cementitious grout to be placed between duct and column tube to grout column in place. (To achieve 40N/mm² in 3 days and 65N/mm² in 28 days.

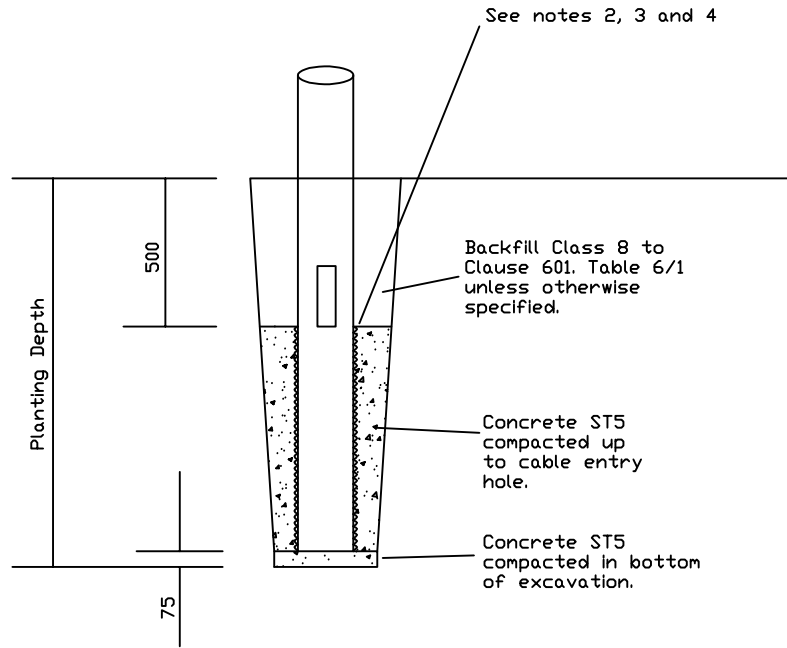

PLANTING DETAILS

No.	Date	Description
↑ AMENDMENTS ↓		

HIGHWAY CONSTRUCTION DETAILS

ROAD LIGHTING

COLUMN PLANTING DETAILS
SOCKET TYPE ROOT

Drawing No.

K90